



Office Comb Binder

Pulsar 300




Please read these instructions before use.

Veuillez lire ces instructions avant utilisation.

Lea estas instrucciones antes del uso.

fellowes.com

ENGLISH

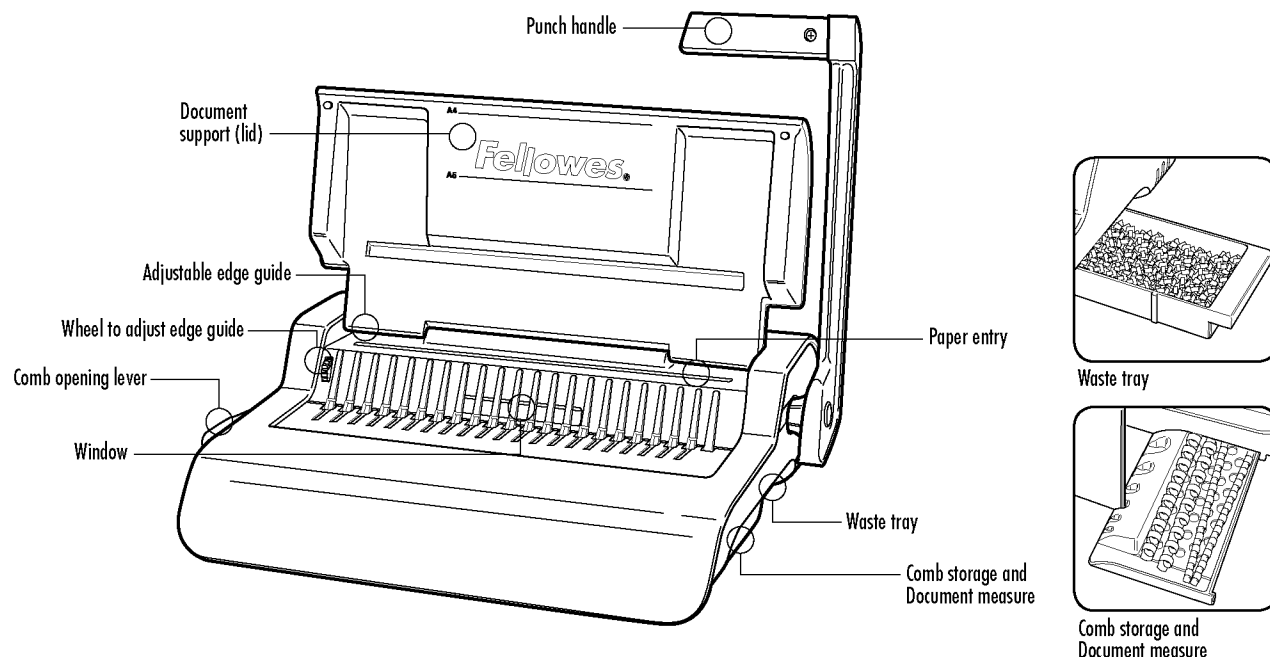

CAPABILITIES

Punching Capacity

Paper sheets

70-80g / 20lb	15 sheet
---------------	----------

Transparent covers

100-200 micron / 4-8 mil	3 sheet
200+ micron / 8+ mil	2 sheet

Other standard covers

160-270g / 40-60 lb	3 sheet
270+g / 60+ lb	2 sheet

BINDING CAPACITY

Max comb size	38mm
Max document (80g / 20lb)	c. 300 sheet

TECHNICAL DATA

Paper dimensions	US letter	Waste tray capacity	c. 1500 sheet
Punching slots	19	Net weight	7 kg / 15.4 lb
Slot pitch	14.28mm / 9/16"	Dimensions (LxDxH)	460 x 390 x 130mm / 18.1" x 15.3" x 5.1"
Adjustable edge guide	yes- rotary		

IMPORTANT SAFETY INSTRUCTIONS — Read Before Using!



Please keep for future reference


When punching;

- always ensure the machine is on a stable surface
- test punch scrap sheets and set the machine before punching final documents
- remove staples and other metal articles prior to punching
- never exceed the machines quoted performance


COMB DIAMETER & DOCUMENT SIZES

		
mm	inch	number of pages
6mm	1/4"	2-20
8mm	5/16"	21-40
10mm	3/8"	41-55
12mm	1/2"	56-90
16mm	5/8"	91-120
18mm	1 1/16"	121-150
22mm	7/8"	151-180
25mm	1"	181-200
32mm	1 1/4"	201-240
38mm	1 1/2"	241-340


SET UP

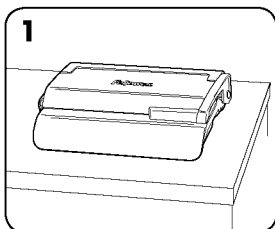


1. Ensure the machine is on a stable surface.

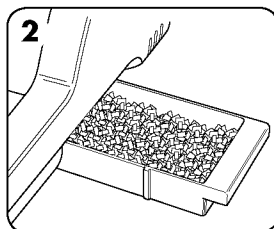

2. Check waste tray is empty and correctly fitted

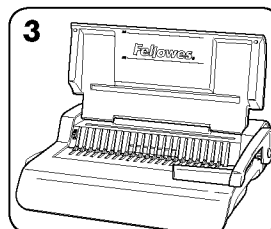


3. Lift the lid. Ensure the comb-opening lever is pushed backwards.

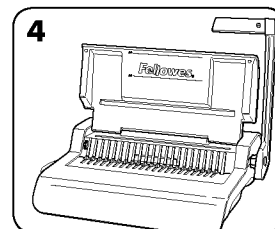


4. Lift the punch handle to its upright position.


BEFORE YOU BIND

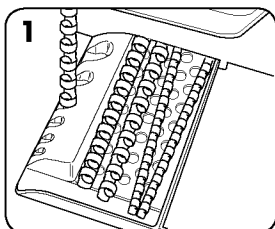


1. Select the correct comb diameter using the comb storage tray.

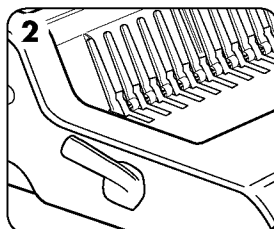

2. Insert the plastic comb into the mechanism.

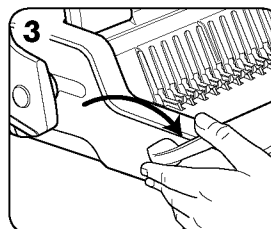

3. Pull comb-opening lever forward to open the comb.

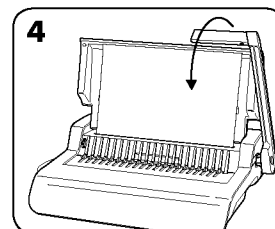


4. Test punch scrap sheets to check edge guide setting.

ENGLISH


STEPS TO BIND

1

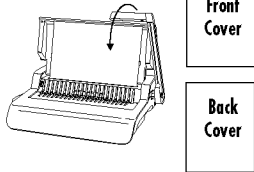


1. Punch front and back covers first.

2

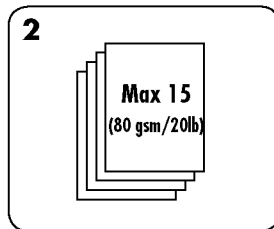


2. Punch sheets in small batches that do not overload the machine or the user.

3

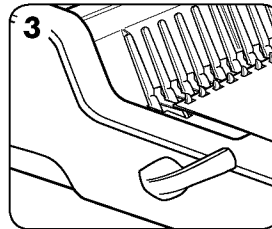

3. Load punched sheets directly onto the opened comb. Starting with the front of the document.

4

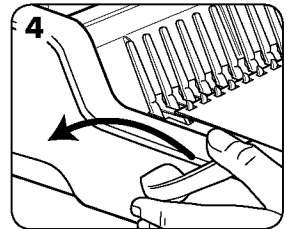

4. When all punched sheets are loaded onto the comb, push the comb lever backwards to close the comb and remove the bound document.

CORRECTING A BOUND DOCUMENT

Additional sheets may be included or removed at any time by opening and then closing the comb as previously described.

REMOVAL OF WASTE CLIPPINGS

The waste tray is located under the machine and is accessed from the right side. For best results empty the tray regularly.

STORAGE

Lower the punch handle to the horizontal position. Lower the lid. The Pulsar comb binder is designed to be stored horizontally on the desktop.

TROUBLESHOOTING

Problem	Cause	Solution
Punched holes are not central	Edge guide not set	Adjust edge guide until hole pattern is correct
Machine will not punch	Blockage	Check waste tray is empty. Check for blockage to paper entry.
Punch holes are not parallel to edge.	Debris is stuck below dies.	Take stiff cardboard and slide into the paper entry. Move the cardboard sideways to release any stray clippings into the waste tray.
Partial holes	Sheets not correctly aligned to punch pattern.	Adjust edge guide and test punch scrap sheets until correct
Damaged hole edges	Possibly overloading the machine	Punch plastic covers with paper sheets. Reduce number of sheets being punched.
Waste tray leaks	Waste tray is not correctly inserted or 'burst feature' has activated	Check waste tray is empty and 'burst feature' is closed.

Need Help?

Customer Service....
www.fellowes.com
 Let our experts help you
 with a solution.
 Always call Fellowes
 before contacting
 your place of purchase.

WARRANTY

Fellowes warrants all parts of the binder to be free of defects in material and workmanship for 2 years from the date of purchase by the original consumer. If any part is found to be defective during warranty period, your sole and exclusive remedy will be repair or replacement, at Fellowes' option and expense, of the defective part. This warranty does not apply in cases of abuse, mishandling or unauthorised repair. Any implied warranty, including that of merchantability or fitness for particular purpose, is hereby limited in duration to the appropriate warranty

period set forth above. In no event shall Fellowes be liable for any consequential damages attributable to this product. This warranty gives you specific legal rights. You may have other legal rights that vary from this warranty. The duration, terms and conditions of this warranty are valid worldwide, except where different limitations, restrictions or conditions may be required by local law. For more details or to obtain services under this warranty, please contact Fellowes or your dealer.